






**7178.0415**

Onderdelen informatie  
Erzatzteil information  
Spare part information  
Information de pièces

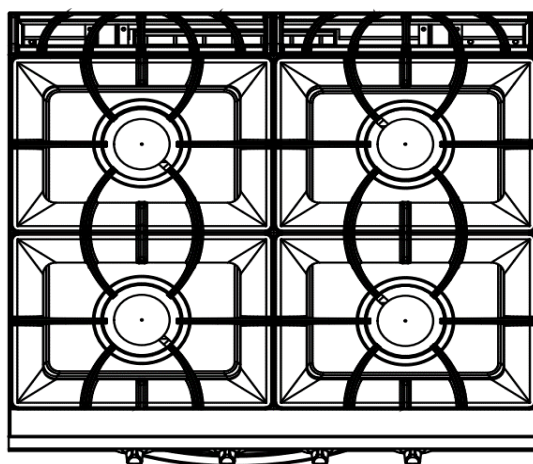

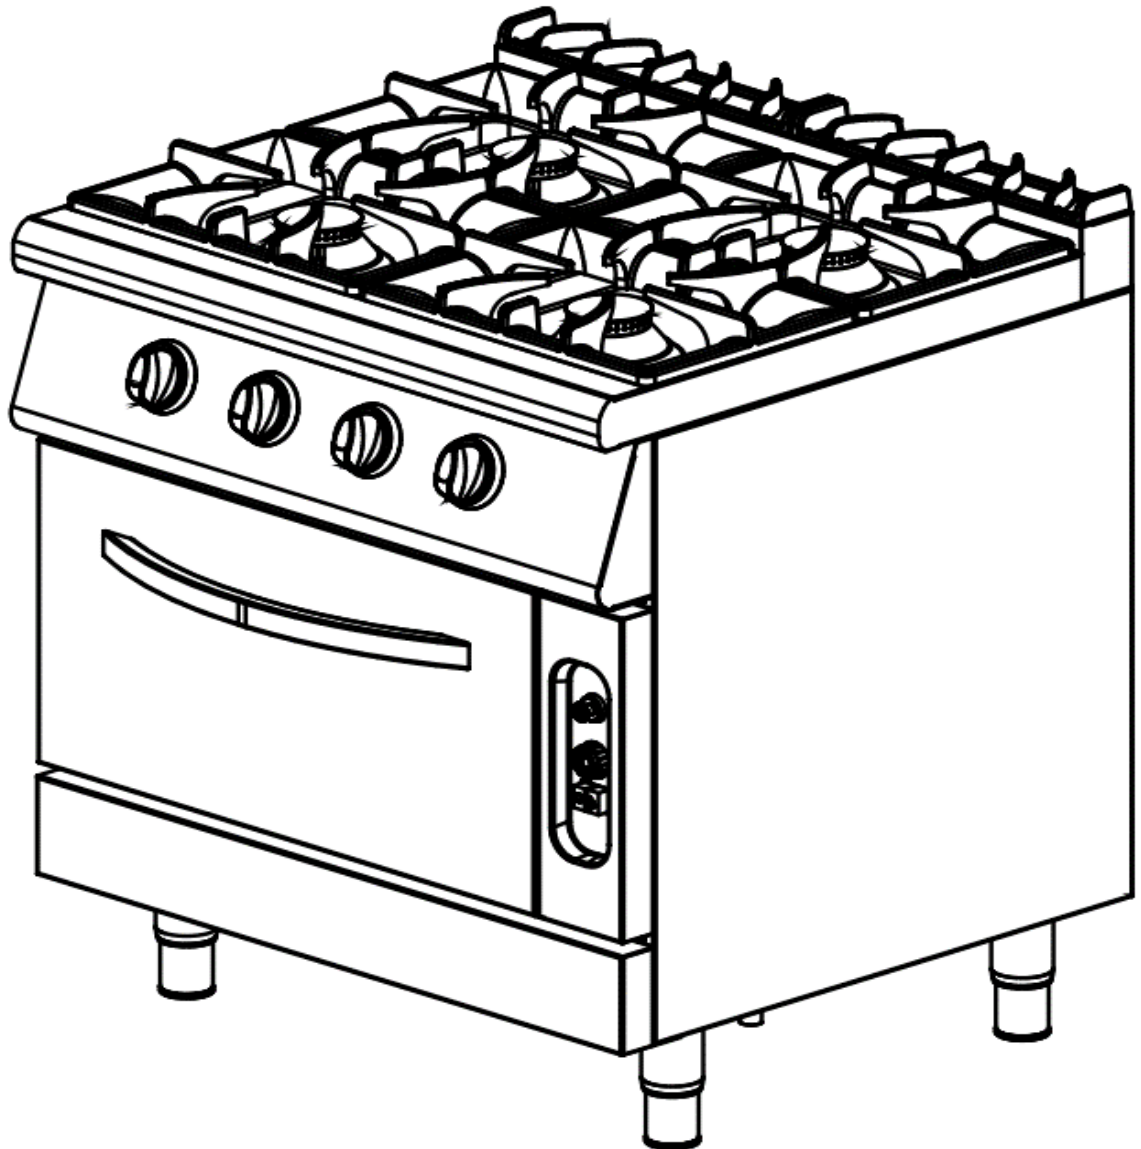

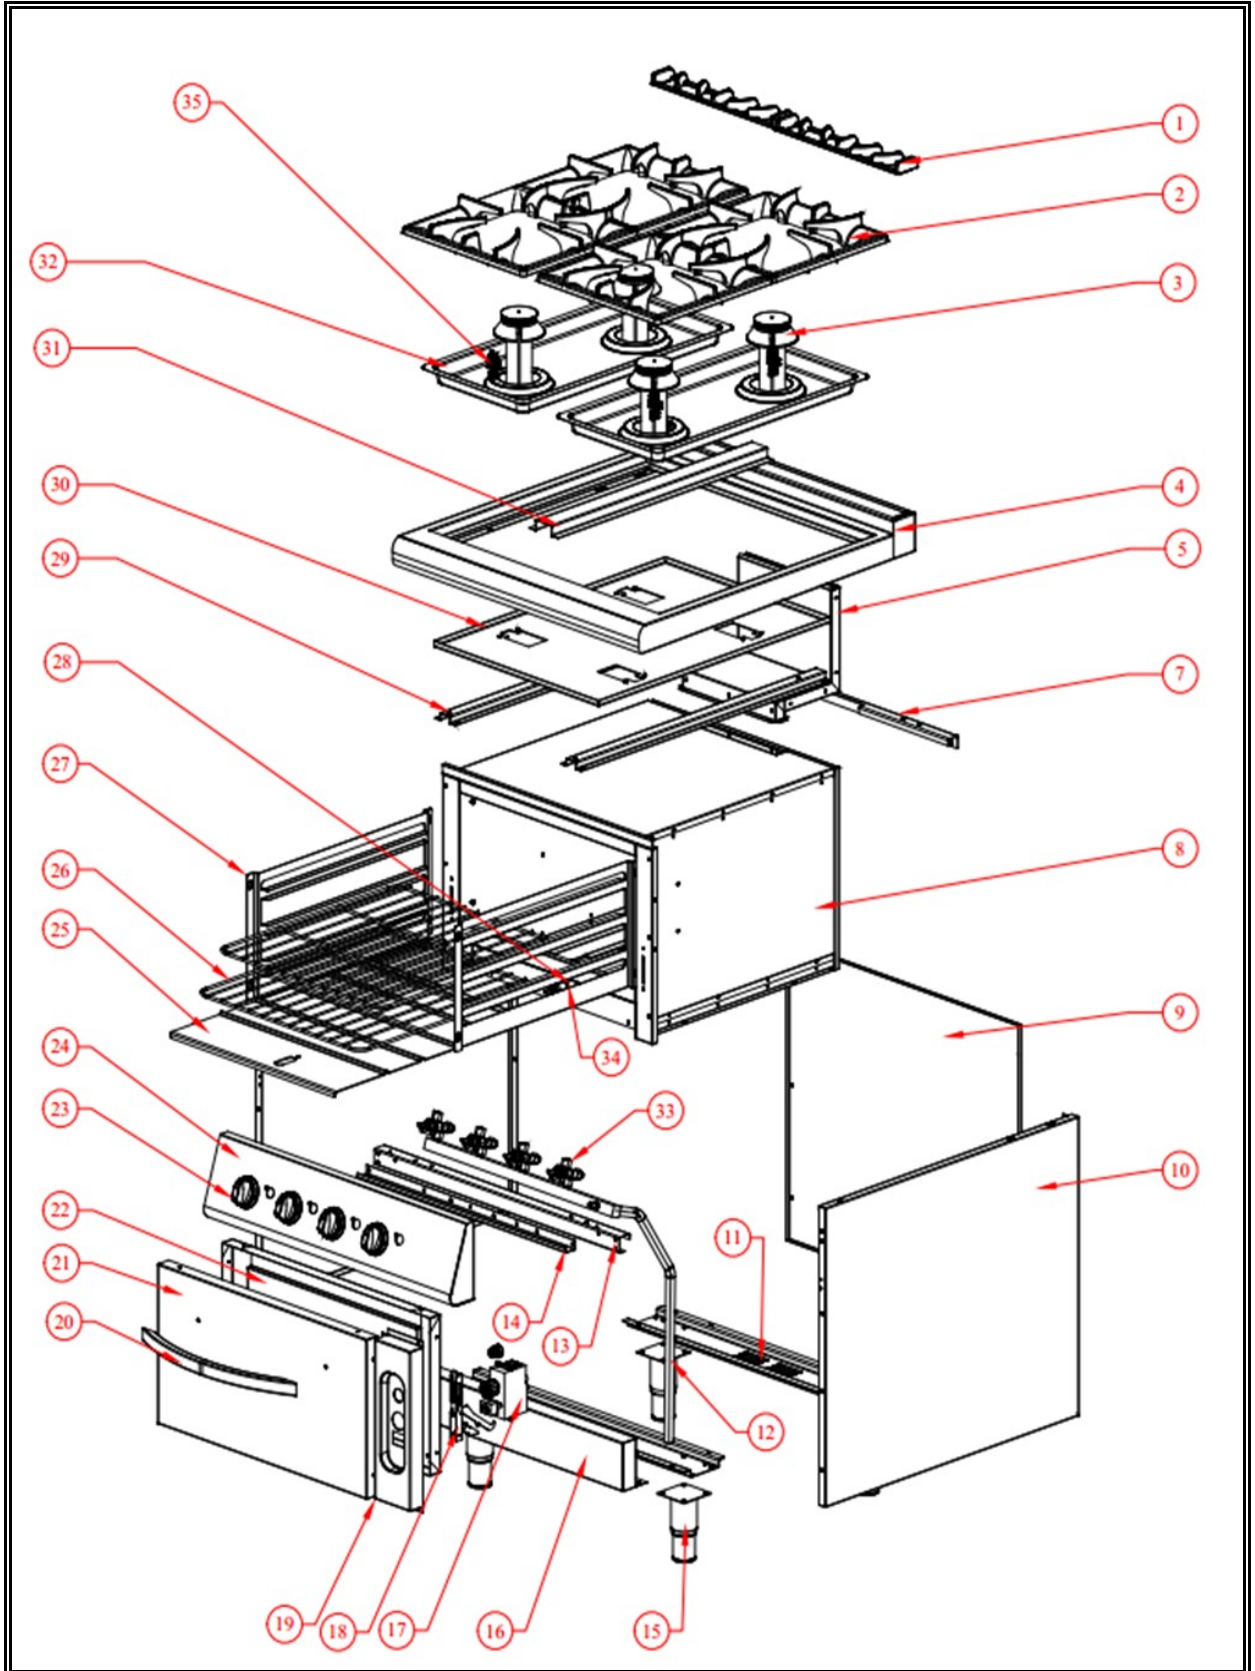

POS:	Art.No.:	Omschrijving:	Aantal:
1	9289.0280	Iron Cast Chimney	2
2	9289.0275	Top Grate of Cooker	4
3	9289.0270	Burners	4
4		Worktop	1
5		Oven Chimney	1
7		Burner Support Part	1
8		Oven	1
9		Back Panel	1
10		Right Side Panel	1
11		Legs Fixing Part	2
12	9289.0415	Gas Tank	1
13		Front Support	1
14		Front Panel Fixing Part	1
15	9289.0405	Adjustable Legs	4
16		Nether Panel	1
17	9289.0435	Oven Gas Valve	1
18	9289.0445	Oven Hinge	1
19		Front Side Panel	1
20	9289.0450	Door Handle	1
21		Door Outer Part	1
22		Door Inner Part	1
23	9289.0660	Knob	4
24		Front Panel	1
25		Bottom Plate	1
26	9289.0420	Oven Grate	1
27		Oven Grate Sliders	2
28	9289.0730	Pilot	1
29		Burner Support Part	2
30		Heaters Fixed Part	1
32		Oil collector Sheet	2
33	9289.0075	Gas Valve	4
34	9289.0430	Oven Burner	1
35	9289.0710	Pilot	4