





**7455.1620**

Onderdelen informatie  
Erzatzteil information  
Spare part information  
Information de pièces

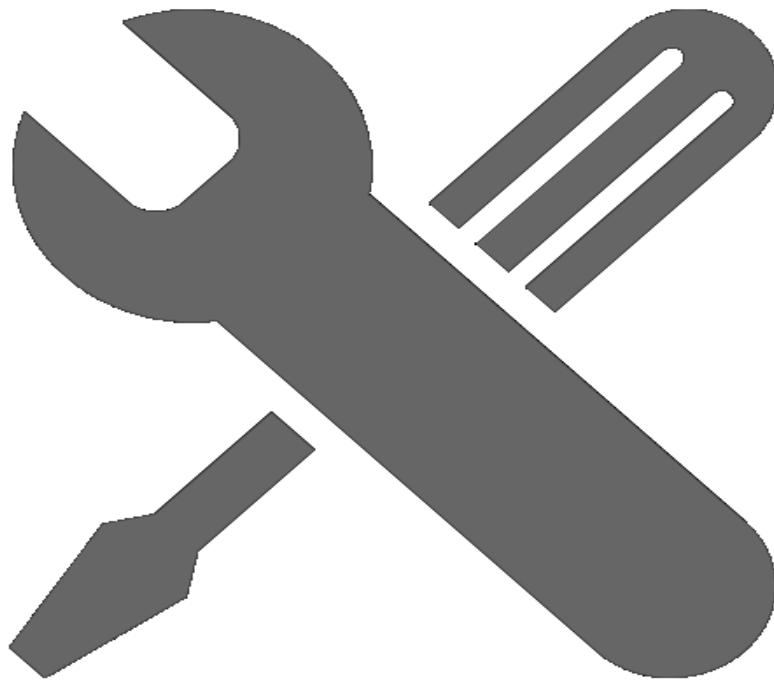



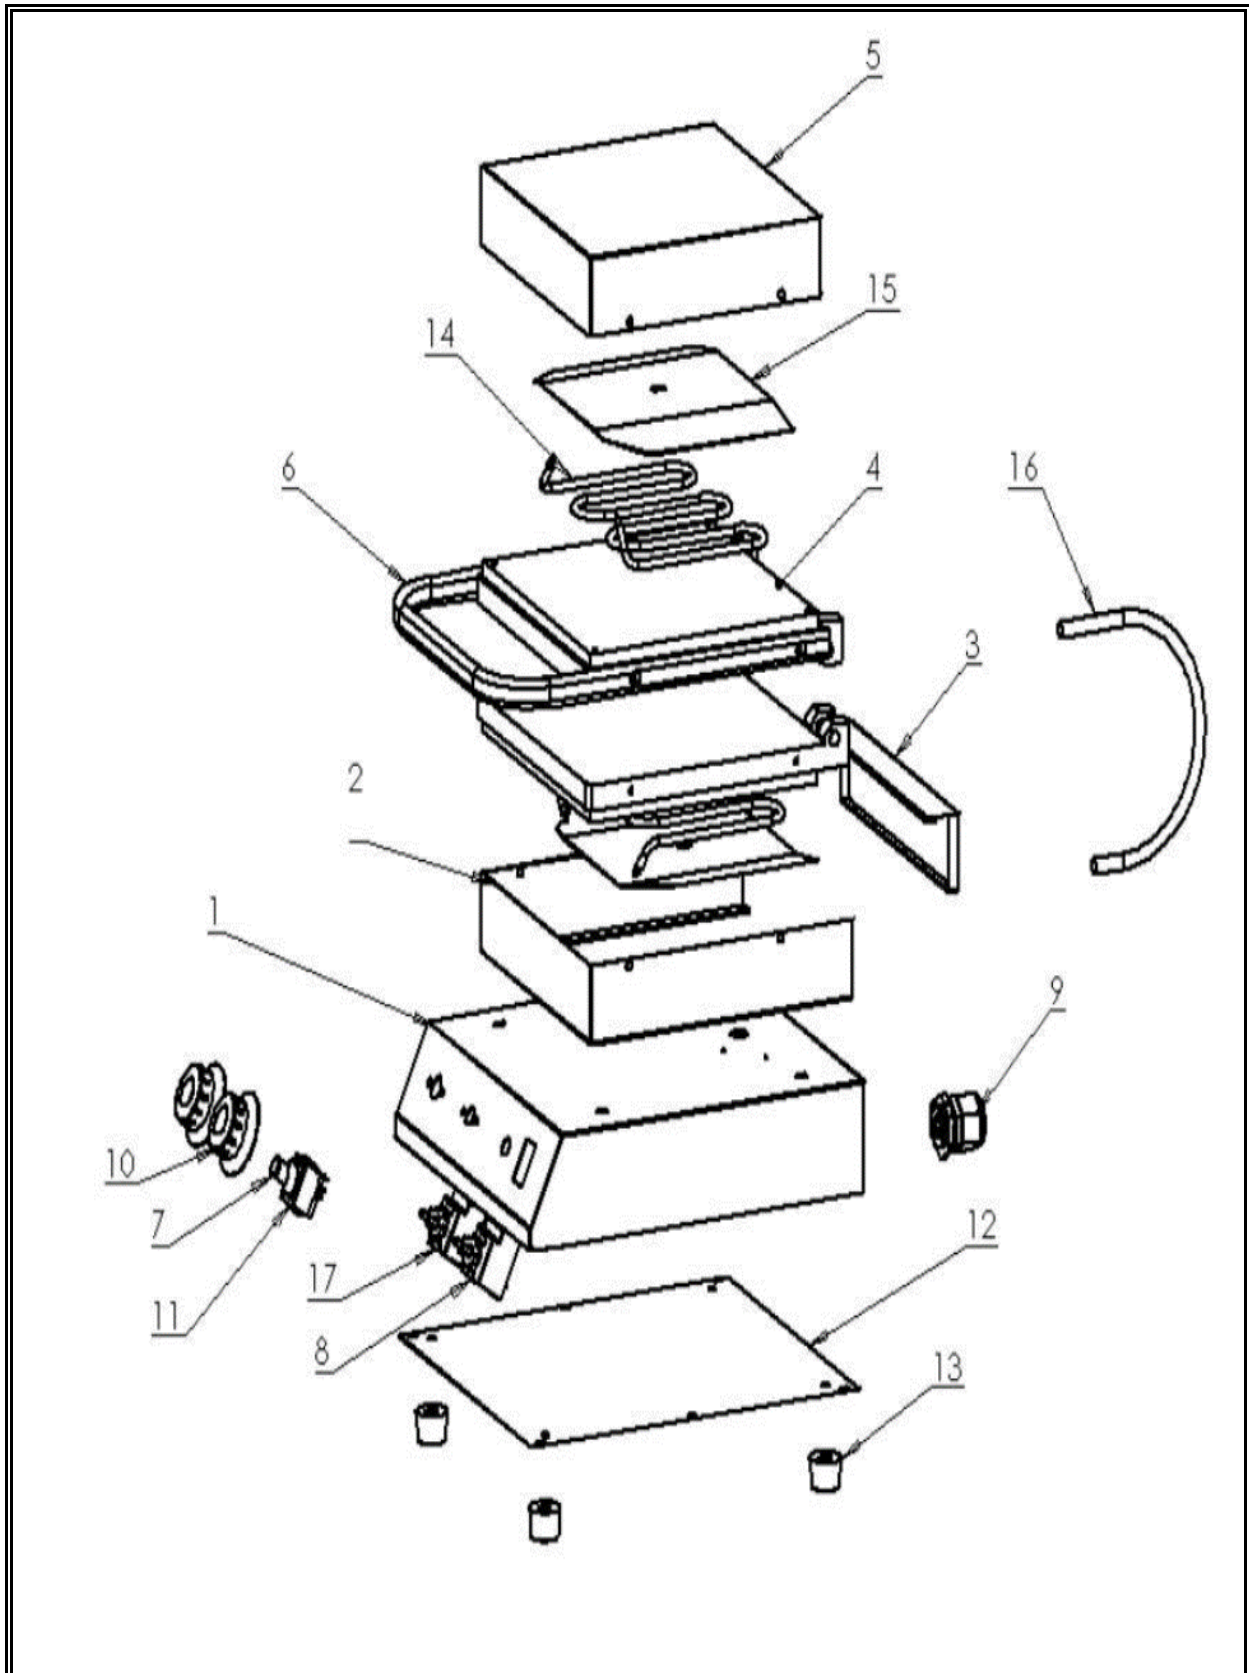

POS:	Art.No.:	Omschrijving:	Aantal:
1		Body	
2		Bottom cover	
3		Back cover	
4		Cooking plate	
5		Top cover	
6		Handle	
7	9088.0228	Timer knob	
8	9088.0226	Timer	
9		Power cord jacket	
10	9088.0220	Thermostat knob	
11	9030.0510	Power Switch	
12		Bottom plate	
13	9088.0216	Feet	
14	9088.0222	Heating element	
15		Heating element fixed plate	
16		Connect tube	
17	9088.0224	Thermostat	
.	9344.0000	Signaallamp	