

# VOGUE

# QUICK FIT TORCH HEAD

Ideal for: Caramelizing Sugars, Custards, Flans, Meringue Pies, Bread Puddings, Melting, Skinning Tomatoes, Browning Meats and more.



VOGUE







•Fourth Way, Avonmouth, Bristol, BS11 8TB, UK •42 North Point Business Park, New Mallow Road, Cork, Ireland

W162xH215mm

# INSTRUCTIONS:

#### **1** ASSEMBLY:

Ensure that the gas control knob (3) is turned to the "-" position (turned fully clockwise) before assembling.
Keep the cartridge or cylinder upright when fitting it to the valve (4).

• Place the valve securely on top of the cylinder valve, gently screw the burner into the valve until it meets the O-ring of the valve. Be careful not to cross thread the cylinder when fitting. Screw hand tight only. **Do not overtighten or you will damage the cartridge valve.** 

#### **OPERATING**:

• Use only high quality Butane gas cylinder.

- Make sure the "- / +" control knob (3) is in the "-" position.
- Shake the gas cylinder a few times to warm the fuel up.
- Turn the gas control knob (3) counter-clockwise for about 2/3 of a circle. The gas will blow out from the burner nozzle of the torch with a hiss" sound. Press the ignition button (2) to ignite the flame at the burner (1).
- Adjust the flame size by turning the control knob to either left (-) or right (+). Recommended flame length should be adjusted to 1/2" to 3/4" to avoid any waste of gas or unstable flame.

# **③** COLD WEATHER OPERATION:

In cold weather the size of the flame will be smaller.
The cartridge should be allowed to adjust to room temperature prior to use to produce a larger flame. It is very possible that the flames will extinguish when the torch is turned upside down in cold weather.

# **4** TURNING OFF AND STORAGE:


- After use, ensure that the valve is fully shut (gas control knob turned fully clockwise).
- Be sure the flame is extinguished and the burner has cooled down and no other flame is nearby.
- When torch is cool, turn the fuel cylinder anti-clockwise from valve body to disconnect.
- Keep and store the torch and cylinder in safe places, away from fire.

# G CAUTIONS:

- 1. Read instructions before use.
- 2. Disconnect the cylinder when not in use.
- 3. Never attempt to repair a damaged torch.
- 4. Never modify the torch. This may cause the torch to become unsafe.
- 5. Always point away from face, body & clothing when igniting.6. Do not store under direct sunlight or any place where
- temperature will exceed 40°C (104°F).
- 7. Work only in well-ventilated areas.
- 8. Avoid contact of flux with skin or eyes.
- 9. Always wear protective gloves and use proper tools to handle hot works.
- 10. Be aware that the burner can get extremely hot during use. Do not touch!
- 11. Take extra precautions to protect yourself and others from accidental burns.
- 12. Keep out of reach of children.

### Category: direct pressure appliance.

This appliance shall only be used with threaded valve type butane cartridge according to bayonet type. This burner is for culinary use only.

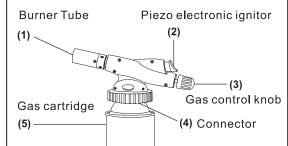

SpecificationSize171(L) x 62(W) x 77(H)WeightApprox. 256 g