



WAFFLES STICKING?

Waring Waffle Makers are equipped with a nonstick coating to prevent waffles from sticking. However, if sticking begins to occur, use soft bristle or silicone brush to evenly coat plates with cooking oil. We do not recommend using nonstick spray because, if used over time, will cause a buildup of plate tackiness.

Buildup on plates? Plates scratched?

Plates are removable and can be easily replaced on location.

Order – WBW300XRP

Good practices.

Use the provided waffle fork to remove waffles from the machine.

Use the provided cleaning brush to thoroughly clean plates without scratching.



Unplug and allow Waffle Maker to cool completely before cleaning.

DAILY STEPS


STEP 1



TIP

Only use brushes with soft bristles to avoid scratching the nonstick coating.


STEP 3

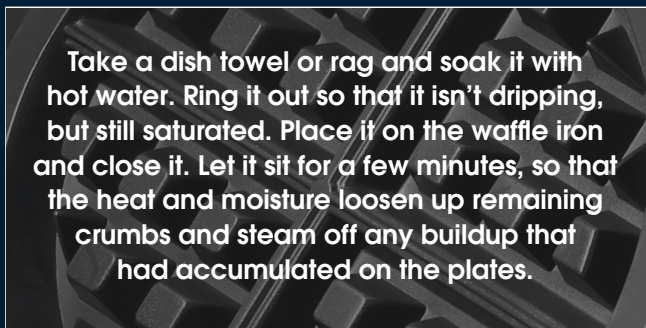

STEP 2



STEP 4

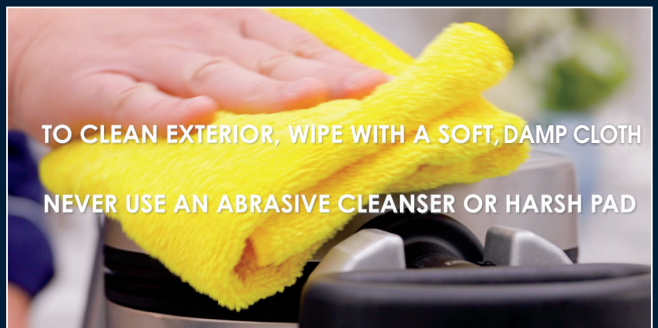

If the waffle maker is overfilled and batter overflows, batter residue will build up on the exterior. To prevent staining on the exterior of the unit, it is important to clean the housing periodically throughout each day of service.

EVERY 3-4 MONTHS

For busy establishments, it may be necessary to replace waffle plates over time.

To replace plates, order through your preferred Waring distributor.

NOTE: Any other servicing should be performed by an authorized service representative.

Plates should not be removed for cleaning. Waffle plates are not dishwasher safe. Steam shield is removable for cleaning. Rinse and sanitize or place on top rack of dishwasher.